
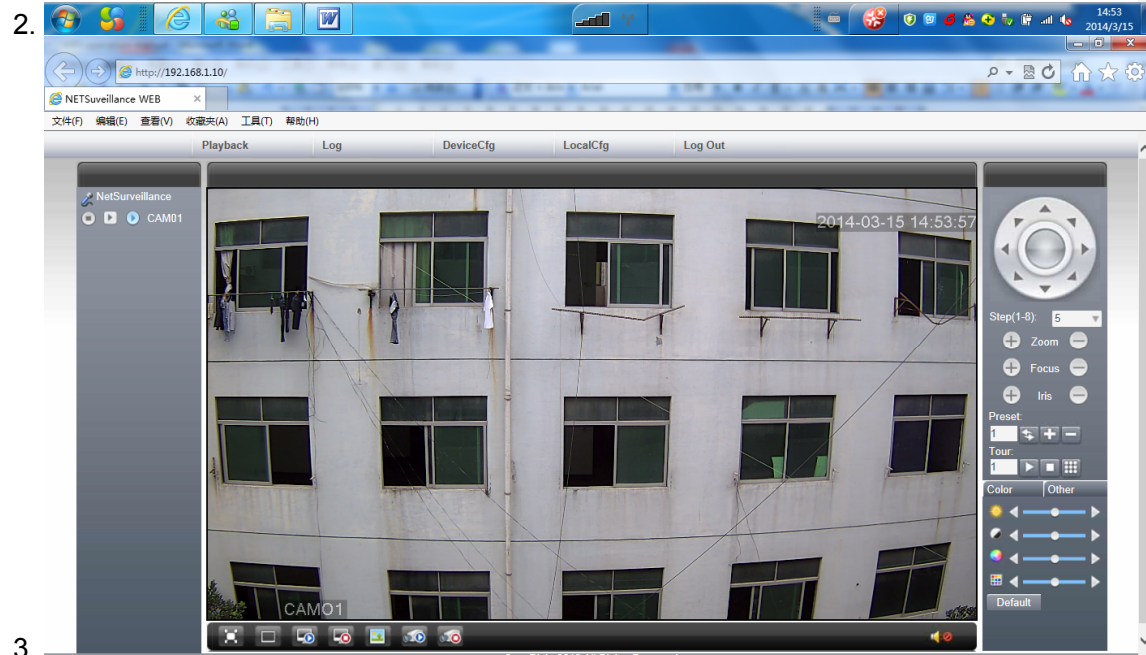


WIFI operation manual


WIFI Step:


1. Go to MainMenu->System->NetService->WIFI,click "Search",see below pic:

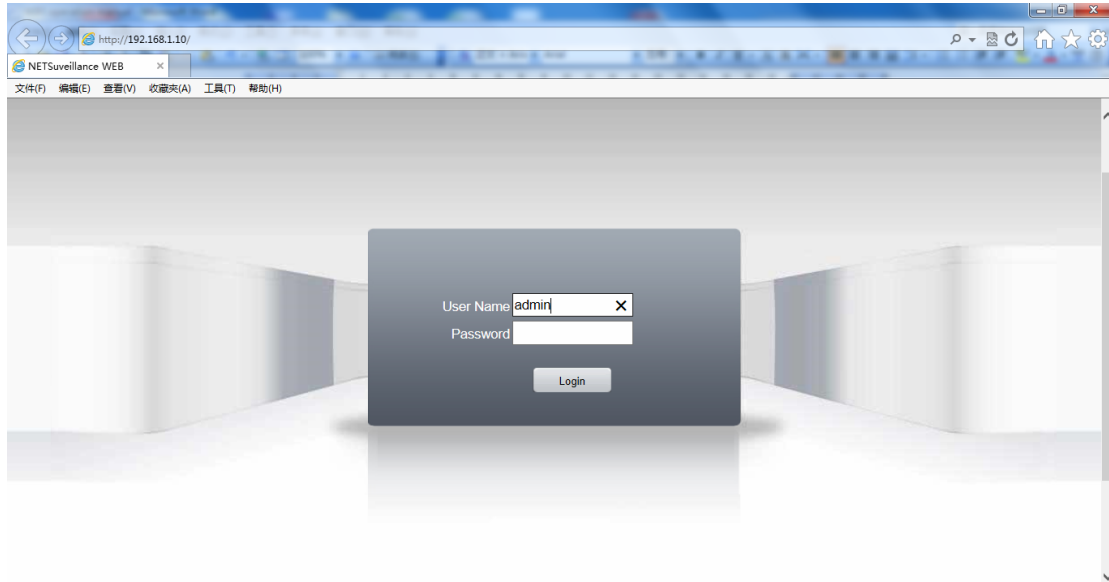


- 3.

4.

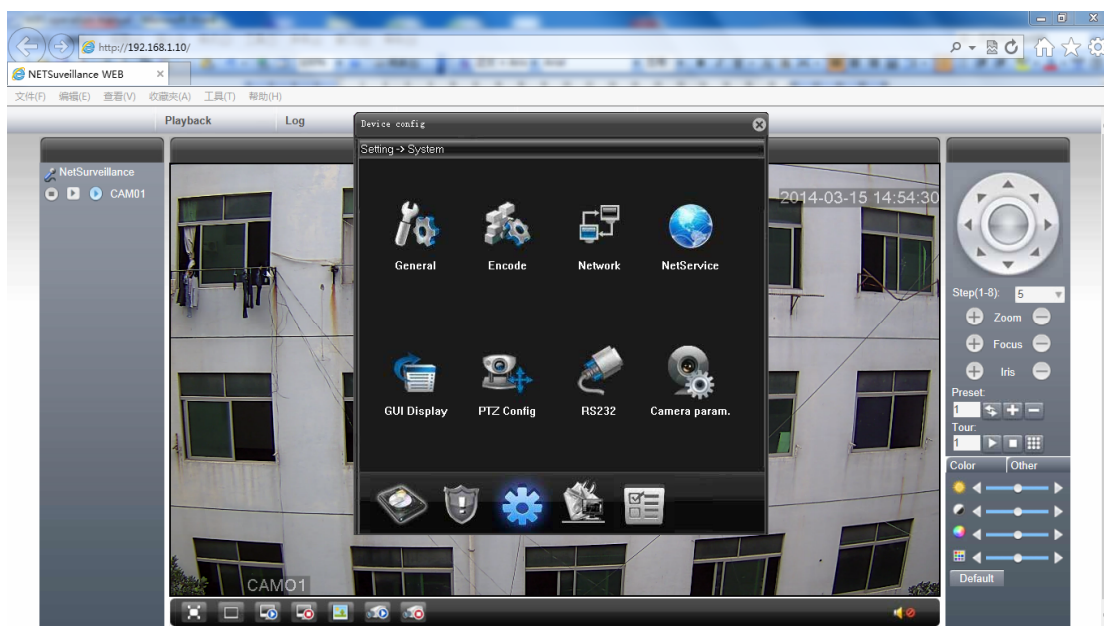

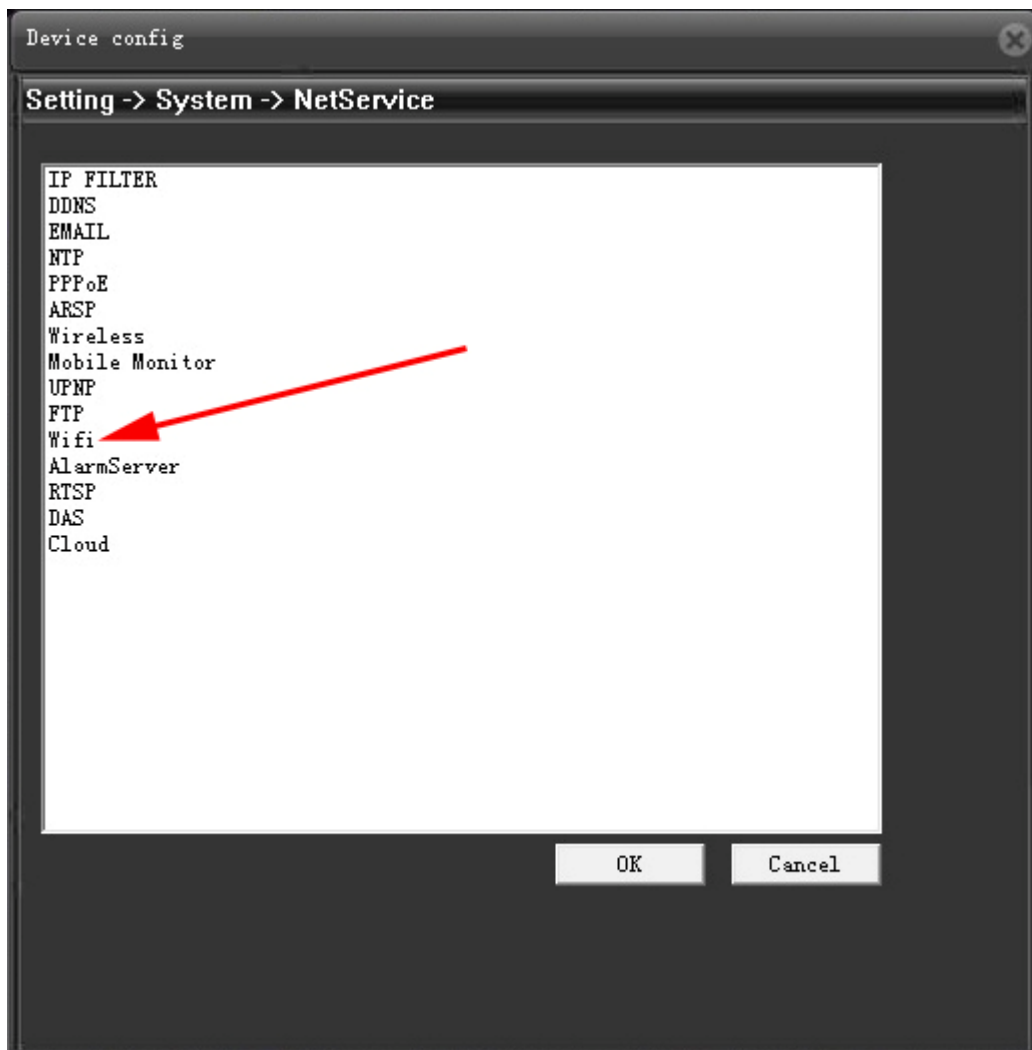

5. Choose your WIFI network, for example 123456789, then set WIFI IP address, see below pic:

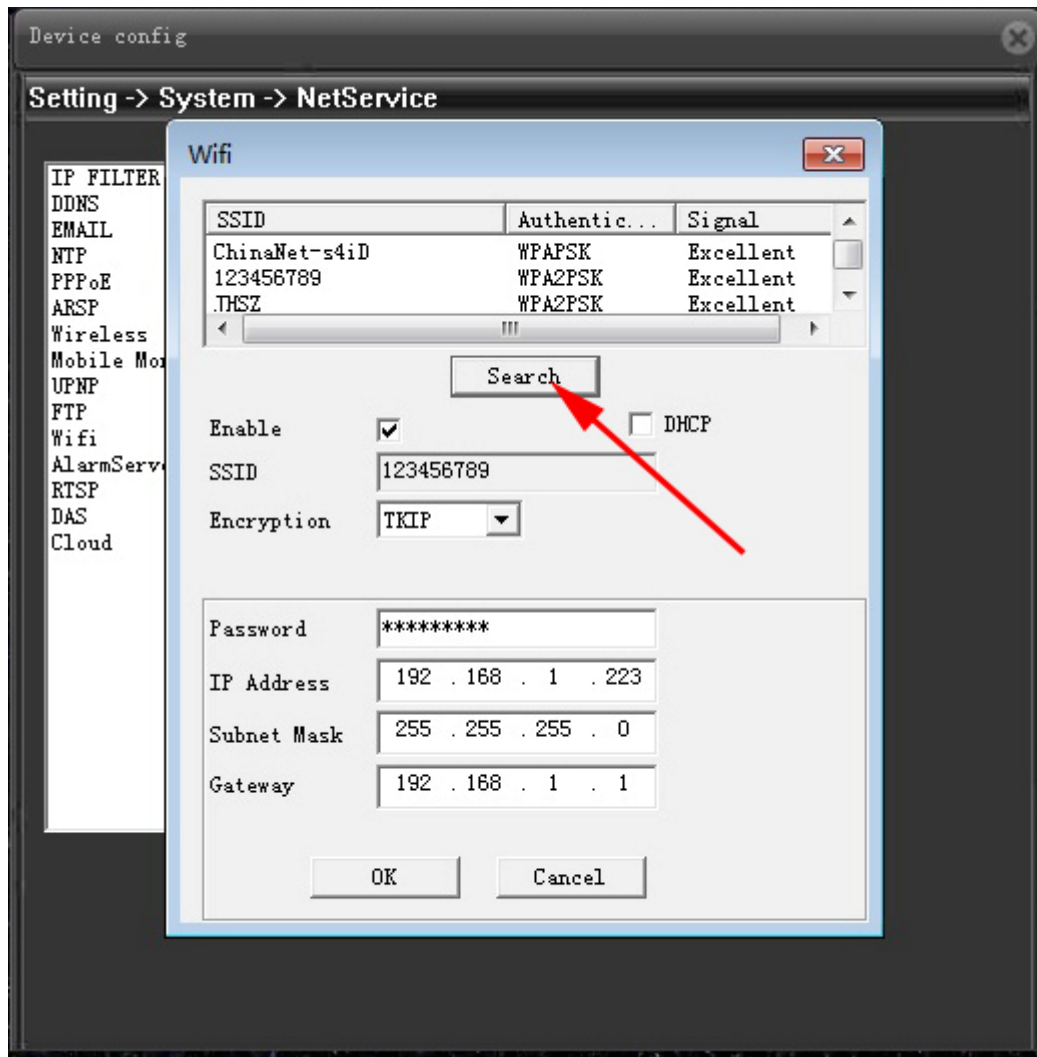

Pls note,WIFI IP address shoule be different with IPC IP address.

6.Use IE or CMS to visit WIFI IP address 192.168.1.223

=====